

User Guide Evaluation Kit for TFT 7" panel with RTP

WWTFTDEMO70H-00# /02#

TFT panel with RTP

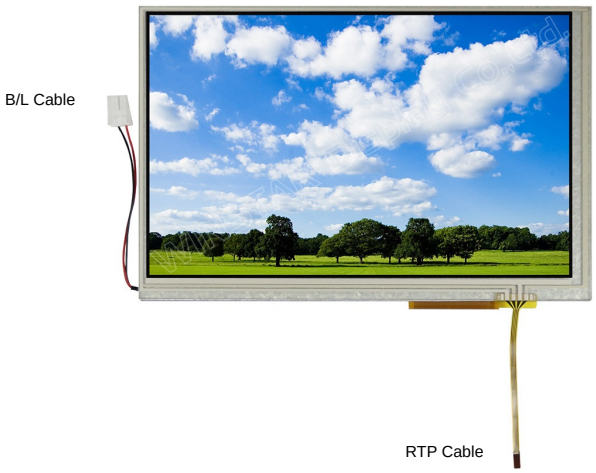

a. SSD1963 control board + RTP interface board + B/L driver

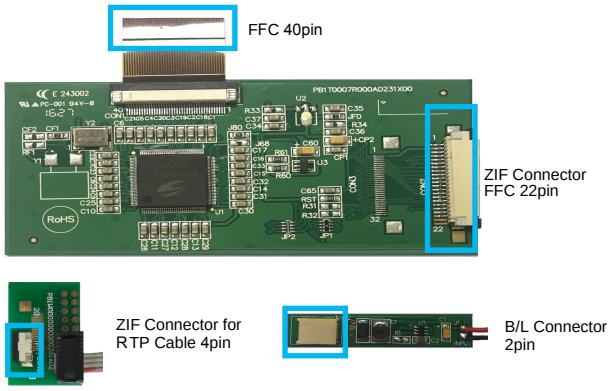


Accessories

c. FFC 22pin



d. Power adapter

b. WWPIC24F-A-00#

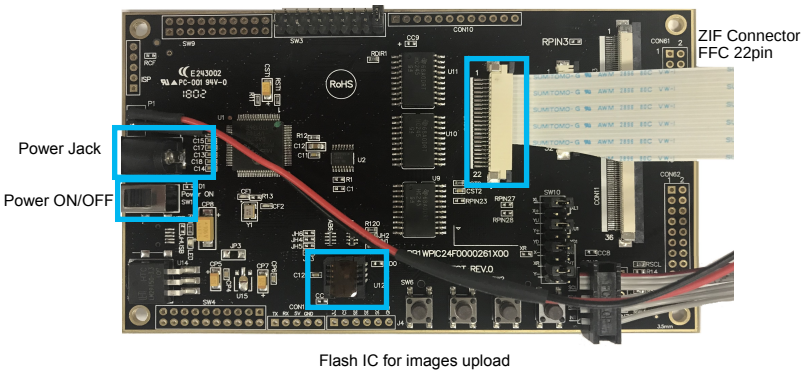

Kit Assembling Guide

1) Connect the TFT display module to the SSD1963 control board (a) via FFC 40pin
2) Connect RTP to RTP interface board (a) via RTP cable 4pin
3) Connect B/L to B/L driver (a) via B/L cable 2pin
4) Connect the SSD1963 control board (a) to the WWPIC24F-A-00# (b) via FFC 22pin (c) between bottom contact ZIF connectors CON5 22pin
5) Insert 5V power adapter (d) to the WWPIC24F-A-00# (b) through power jack connector
6) Power ON through Power ON/OFF switch